

Konfigurering av handskanner Symbol LS1203.

Skanna alla koderna uppifrån och ned:

1/9. Defaults



2/9. USB Device Type Default (HID Keyboard Emulation)



Disable UPC-A



Disable UPC-E




Disable EAN-13



Disable EAN-8



Disable Code 128

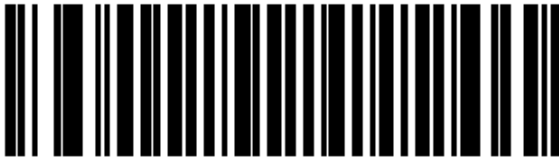

Disable GS1-128

Formerly known as UCC/EAN 128



Disable Code 39



*Enable Interleaved 2 of 5



I 2 of 5 - One Discrete Length



0



8